HOME

DECORATORSCOLLECTION


Assembly Instructions

HDC#.16006 MFG#.1100

Please read over the instructions; it will be a time-saver in the long run.

Note:Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

Please leave bolts loosened until all bolts are placed before tightening completely.

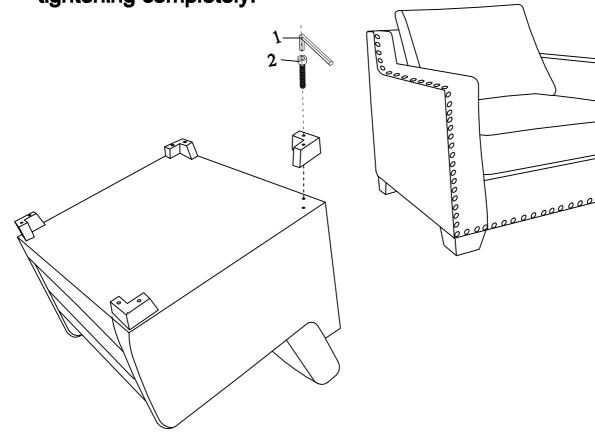

Hardware

1		"L" Wrenches	1pcs
2	[Bolt 8*70mm	8pcs